


Drill holes for all screws 1 3/8" apart

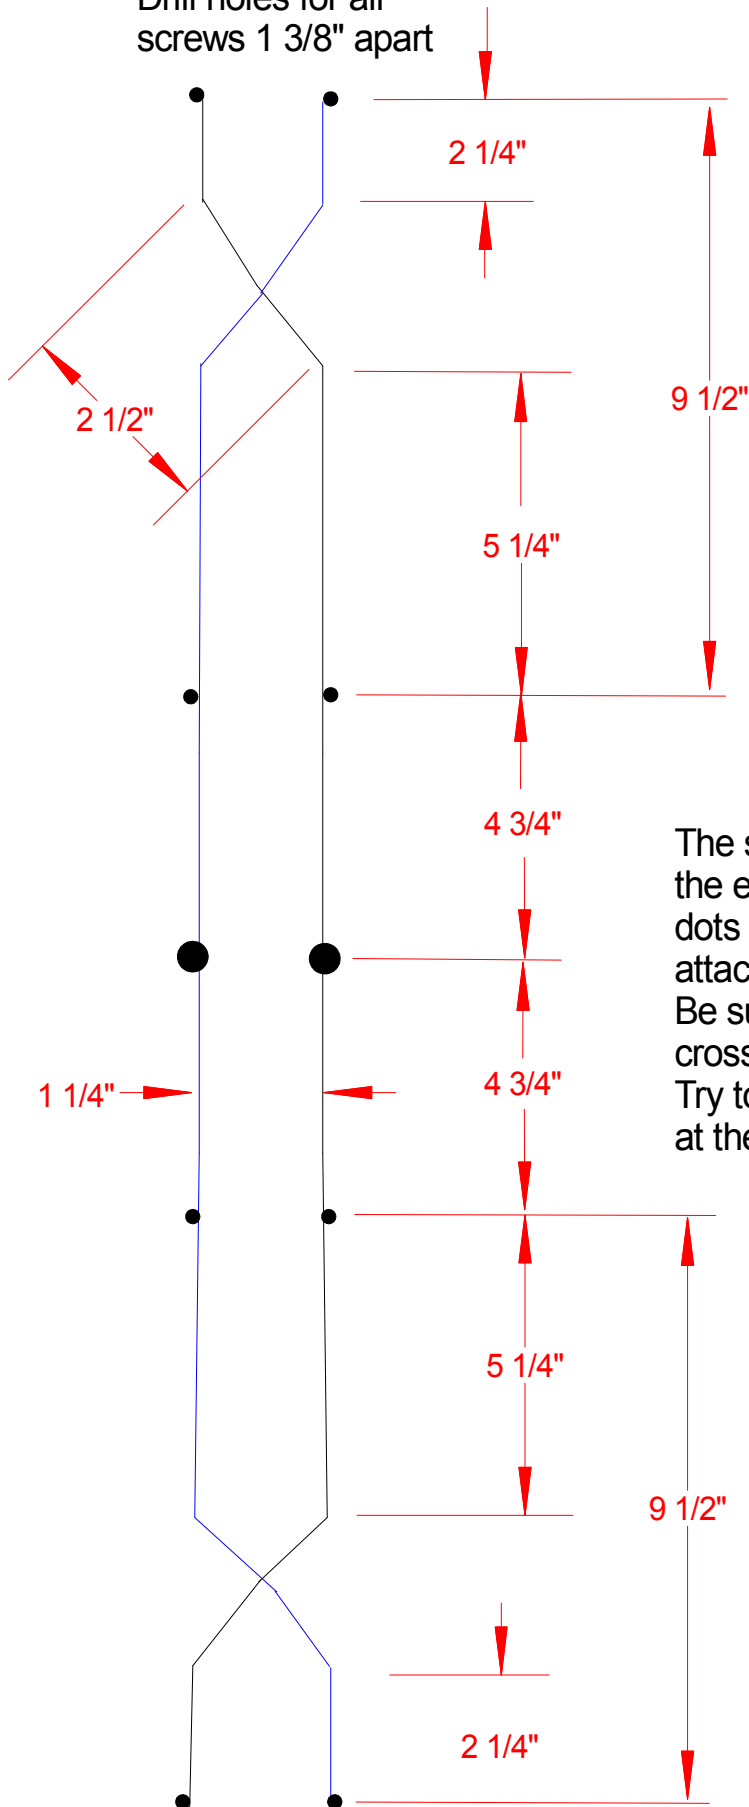

Try to use # 8 to 14 wire for phase lines but anything close will be fine. Copper, aluminum, steel most any metal as long as it makes a good clean connection be sure to clean of all coatings, rust, and oxidation.

4 BAY FEED

The small black dots are where the elements attach and the large black dots are where the balun or feed wire attaches.

Be sure that where the wires in the phase line cross that they DO NOT touch each other. Try to get between 1/2 to 1 inch of separation at the crossover.

9 1/2" element bay spacing
1 1/4" phase wire spacing

Use with 10" whisker elements

Drawing Not to Scale